

Bedienungsanleitung (D)
Operating Manual (EN)

ERSATZKISSEN
REPLACEMENT PILLOWS
BD PILLOW VAC III



BOOTDOC
TUNE YOUR FEET

Bedienungsanleitung (D)

ERSATZKISSEN
BD PILLOW VAC III



BOOTDOC
TUNE YOUR FEET


BD VAC III

Art.-Nr. 01-2300-078 + 01-2300-070

Größe: T 61 x B 50 x H 9 cm




BD PILLOW VAC III

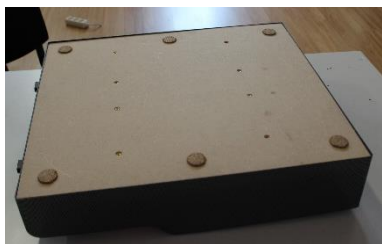

Unterbrechen Sie die Stromzufuhr zu Ihrem Gerät. Drehen Sie das Gerät auf die Rückseite und legen Sie es vorsichtig auf einen stabilen ebenen Untergrund.


Stellen Sie sicher, dass sich auf dem Untergrund keine spitzen oder scharfkantigen Gegenstände befinden.

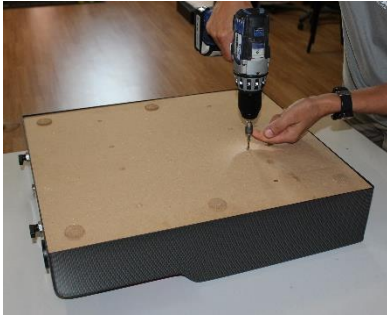


Entfernen Sie die Schrauben auf der Rückseite Ihres Gerätes.



Heben Sie die Abdeckung vorsichtig vom Gerät.

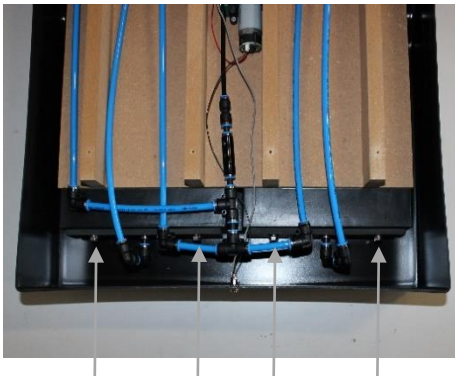

Entfernen Sie diese 4 Schrauben mit einem Schraubenschlüssel der Größe 10.

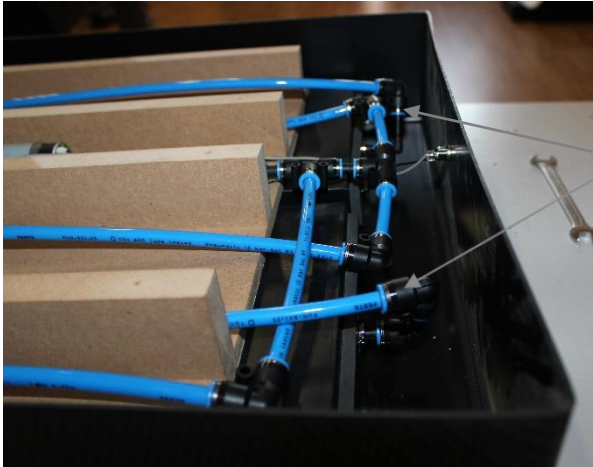


Schnellkupplung auf Zuleitung



Durch Drücken gegen den blauen Ring der Schnellkupplung wird die Verbindung zwischen der Pumpenzuleitung und dem BD PILLOW VAC III getrennt.



Wenn die Verbindung gelöst worden ist und alle Schrauben entfernt worden sind, ist es möglich die Kissen zu entfernen.

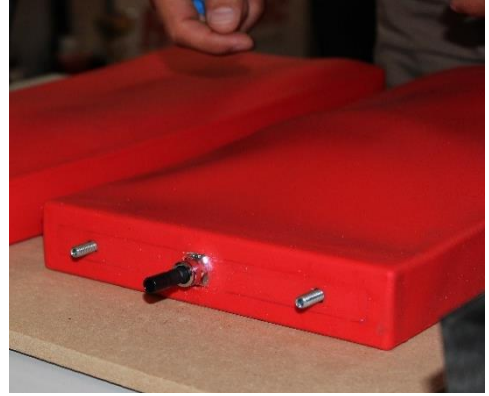

Entfernen Sie die Abdeckkappe an den beiden Ersatzkissen.



Positionieren Sie das Ersatzkissen in die dafür vorgesehene Öffnung.



Befestigen Sie die Kissen mit der vorher entfernten Montageplatte auf der Rückseite.



Schließen Sie die Schnellkupplung wieder an Ihr Gerät an.



Fixieren Sie die Abdeckplatte mit den Schrauben wieder am Gerät. Achten Sie darauf, dass keine Verbindungen, Rohre, Kabel, etc. eingeklemmt sind.



Der Tausch der Ersatzkissen BD PILLOW VAC III ist nun abgeschlossen.



Ihr BD VAC III ist wieder betriebsbereit.

Operating Manual (EN)

REPLACEMENT PILLOWS
BD PILLOW VAC III



BOOTDOC
TUNE YOUR FEET

BD VAC III

Art.-No. 01-2300-078 + 01-2300-070

Dimensions: T 61 x B 50 x H 9 cm




BD PILLOW VAC III




Cut off the power supply to your device (for BD VAC III Electric only). Turn the device to the backside and place it gently on a stable flat surface.


Make sure that there are no sharp edged objects on the surface.

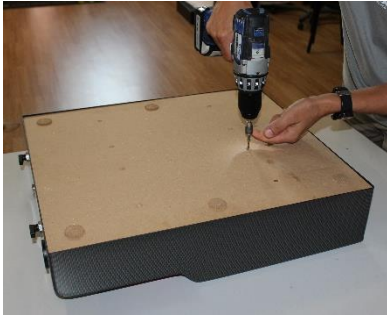

Mark the direction of the bottom cover for front and back. Remove the screws at the back of your device.

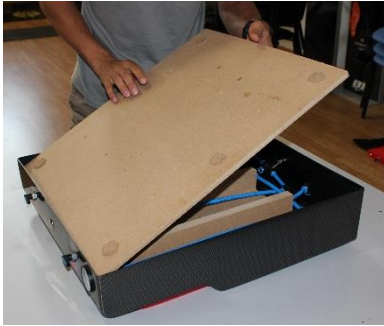


Move the back cover from the device carefully.

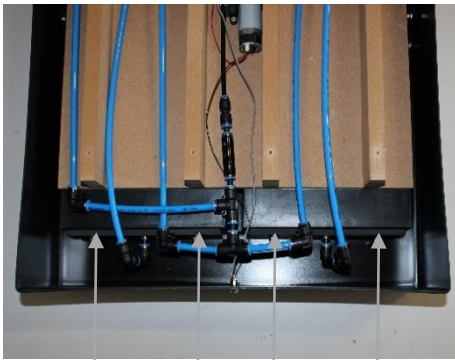

Remove these 4 nuts with a wrench, size 10mm.



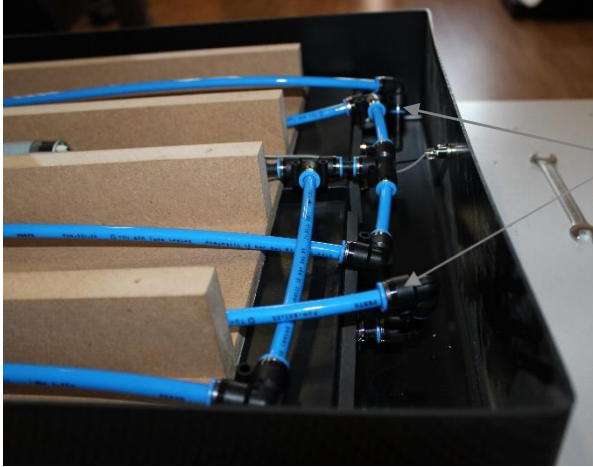


Quick connect coupling on supply line.



By pressing against the blue ring, the connection of the pump supply line and the BD PILLOW VAC III is separated.



After the pump supply line is disconnected and all mounting hardware is removed it is then possible to remove the old pillows.

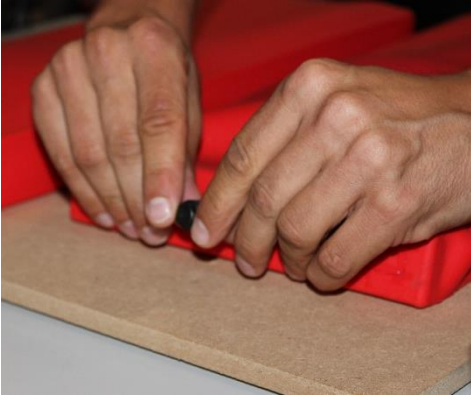

Remove the cap of the replacement pillow(s).



Carefully install the new pillows in the opening provided.



Attach the pillow with the mounting plate that was previously removed at the backside.



Connect the quick coupling to the device by pushing the tube into the opening.



Install the bottom cover plate with the screws on the original direction. Make sure that there are no connections, supply lines, cables, etc. that are pinched.



The installation of the replacement pillows BD PILLOW VAC III is now completed. Perform a test of the vacuum, air and stop functions.



Your BD VAC III is ready for operation.

BOOTDOC
TUNE YOUR FEET

WINTERSTEIGER AG

Johann-Michael-Dimmelstrasse 9

4910 Ried im Innkreis, Austria

Tel.: +43 7752 919-0

Fax: +43 7752 919-55

E-Mail: sports@wintersteiger.at